

Exhaust Servo Eliminator Supplementary Manual



Yamaha FZ-1 ABS 2006-2017 (ESE-Y01)

Secure the bike on a stand.



Remove the seats and the side covers
from the fuel tank.

Remove the fuel tank.



Locate the exhaust servo motor.



Exhaust Servo Eliminator Supplementary Manual



Yamaha FZ-1 ABS 2006-2017 (ESE-Y01)

Remove the exhaust servo motor and unplug the exhaust servo motor connector.



Plug the ESE connectors to the exhaust servo motor connectors.

Secure the unit properly.

