

PS Eliminator Supplementary Manual

Suzuki DL800 ABS TC 2023- (PSE-01)

Secure the bike on a stand.



Remove the seat and the side covers.

Remove the fuel tank.



Locate the stock PAIR (clean air) valve
and unplug the connector.

*(Green, 2-pole connector under the fuel
tank.)*



PS Eliminator Supplementary Manual



Suzuki DL800 ABS TC 2023- (PSE-01)

Remove the PAIR (clean air) valve.

Plug the PSE module into the wiring harness connector.

Secure the unit properly.

