

PS Eliminator Supplementary Manual



Honda CRF300L ABS 2021- (PSE-05)

Secure the bike on a stand.



Remove the seat.

Remove the side fairings.

Remove the fuel tank.



Locate the stock PAIR (clean air) valve
and unplug the connector.



PS Eliminator Supplementary Manual



Honda CRF300L ABS 2021- (PSE-05)

Remove the PAIR (clean air) valve.

Plug the PSE module into the wiring harness connector.

Secure the unit properly.

