


QuickShifter easy Supplementary Manual

BMW F800 GS 2008-2016 (iQSE-1 + QSH-F2D)

Remove the seat.

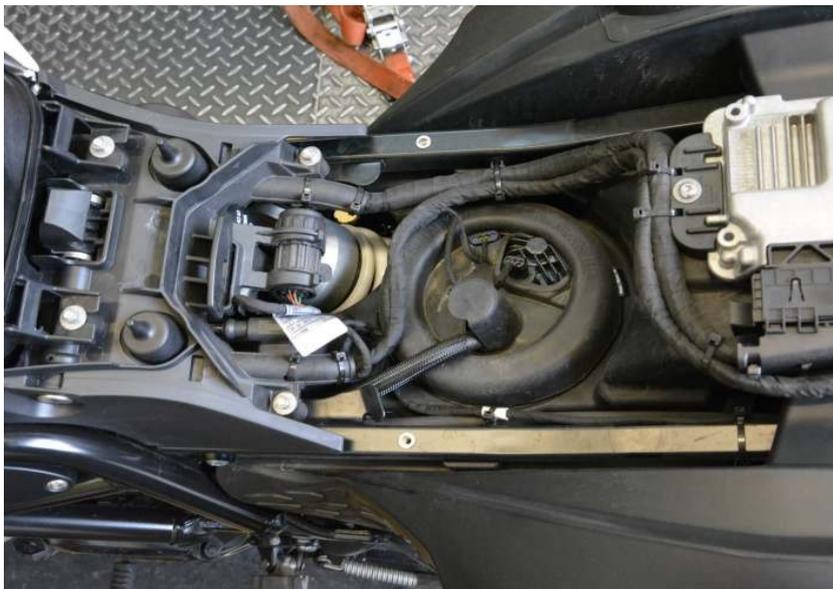

Remove the left and right side covers.



Remove the ignition switch cover.




QuickShifter easy Supplementary Manual




BMW F800 GS 2008-2016 (iQSE-1 + QSH-F2D)


Remove the middle tank cover.

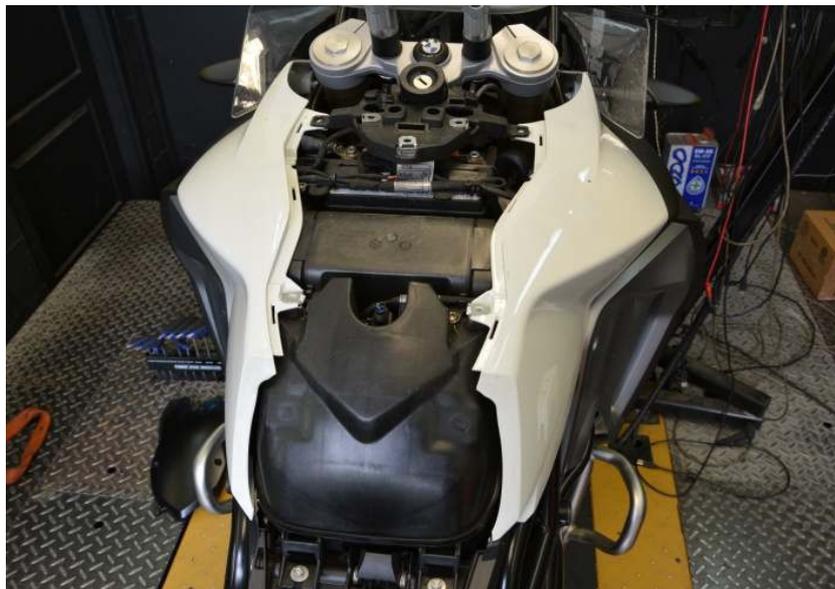

Remove the right side tank cover.

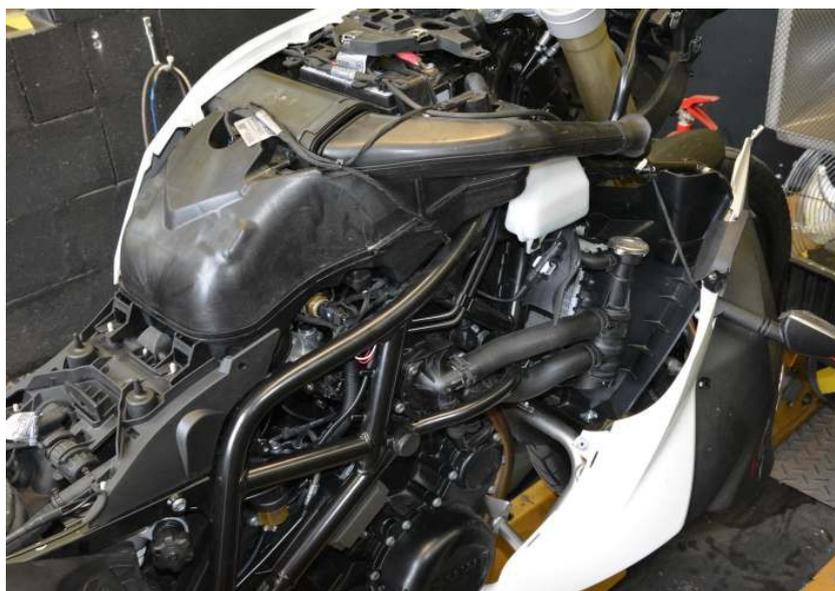

Plug the QSH connectors in-line with the
fuel injector connectors.

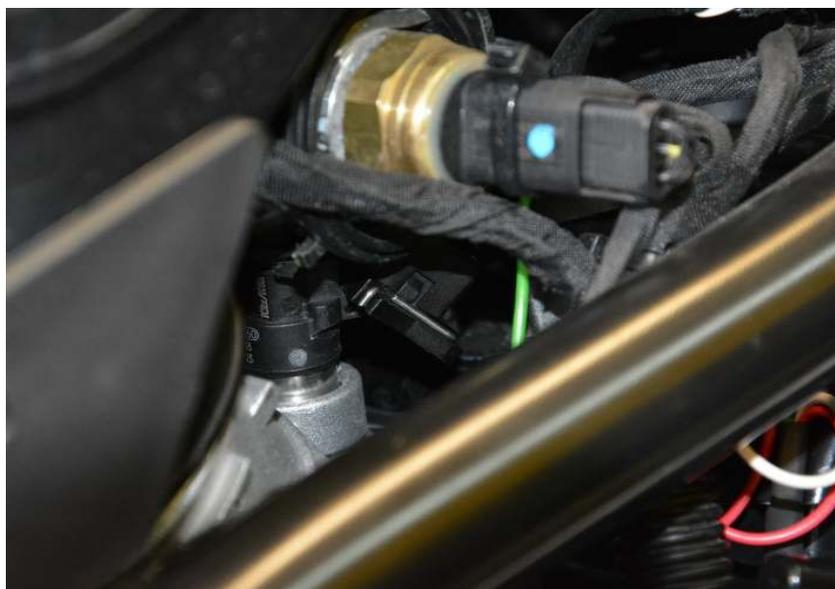

QuickShifter easy Supplementary Manual



BMW F800 GS 2008-2016 (iQSE-1 + QSH-F2D)

Mount the QSE sensor.

*(Replace the bolt with the one supplied.
Place the supplied washers at both sides of
the sensor. Tighten the bolt in this position
by about 6 Nm. If you do not have torque
wrench, tighten the bolt until the shift arm
is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

