

QuickShifter easy Supplementary Manual

Yamaha YZF-R1 2007-2008 (iQSE-1 + QSH-P4A)

Remove the main seat.

Remove the black fuel tank covers.

Remove the fuel tank.



Remove the airbox.



Remove the voltage regulator with the plastic holder.



QuickShifter easy Supplementary Manual



Yamaha YZF-R1 2007-2008 (iQSE-1 + QSH-P4A)

Plug the QSH connectors in-line with the ignition coil connectors.

(Black, 2-pole connectors below the airbox)



Connect the QSH Black wire terminal to the chassis ground.



Mount the QSE sensor.

(Replace the bolt with the one supplied. Place the supplied washers at both sides of the sensor. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



QuickShifter easy Supplementary Manual



Yamaha YZF-R1 2007-2008 (iQSE-1 + QSH-P4A)

Typical position for the QuickShifter easy.

Secure the unit properly.

