

QuickShifter easy Supplementary Manual



Benelli TRK 502 2017- (iQSE-1 + QSX-F2C)

Remove the seats.



Remove the side black plastic covers.



Plug the QSX connectors in-line with the
fuel injector connectors.

*(Black, 2-pole connectors below the fuel
tank.)*



QuickShifter easy Supplementary Manual



Benelli TRK 502 2017- (iQSE-1 + QSE-F2C)

Connect the QSE Black wire terminal to the battery negative terminal.

Mount the QSE sensor under the bolt of gearbox shaft.

(Replace the bolt with the one supplied. Place the supplied washers at both sides of the sensor. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



Typical position for the QuickShifter easy.

Secure the unit properly.

