

X-TRE Power Box Supplementary Manual


Suzuki B-King 2008-2011 (XT-S01)

Remove the main seat.



Remove the chrome fuel tank upper cover.

Remove the left and right indicator covers from the fuel tank.

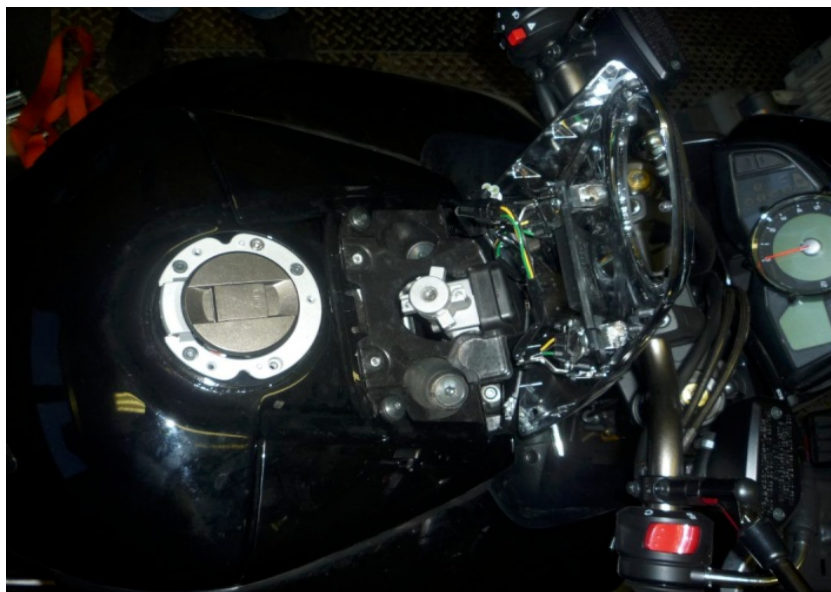

Remove the left and right black frame covers from the fuel tank.

Lift up or remove the fuel tank.



