

QuickShifter easy Supplementary Manual

KTM 1190 RC8 2008-2010 (iQSE-1 + QSH-P2B)

Remove the seat.



Remove the left and right side covers
under the seat.



Remove the fuel tank.




QuickShifter easy Supplementary Manual




KTM 1190 RC8 2008-2010 (iQSE-1 + QSH-P2B)

Plug the QSH connectors in-line with the ignition coil connectors.

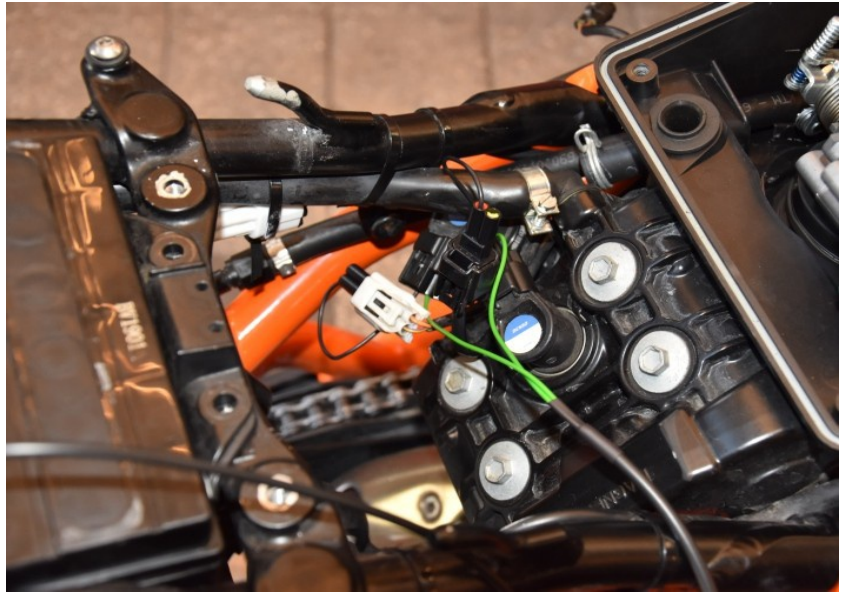

Connect the QSH Black wire terminal to the battery negative terminal.

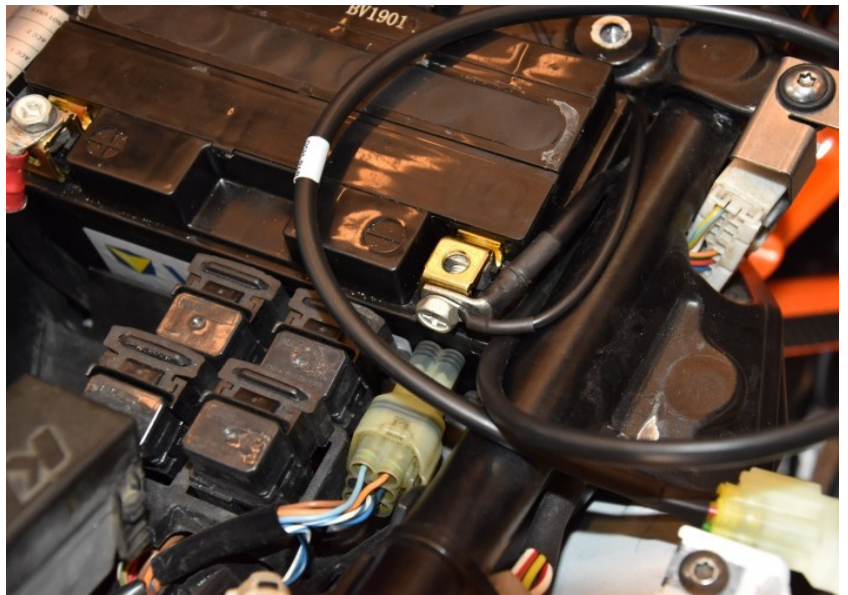

Mount the QSE sensor.

(Place the sensor in the rod as shown. Use the washers supplied at both sides of the sensor. Tighten the nut by hand fully and then by a 1/4 turn using a wrench but maximum to about 6 Nm.)



QuickShifter easy Supplementary Manual



KTM 1190 RC8 2008-2010 (iQSE-1 + QSH-P2B)

Typical position for the QuickShifter easy.

Secure the unit properly.

