


Honda CB1000R 2008-2017 (iQSE-1 + QSH-P2T)

Remove the seats.

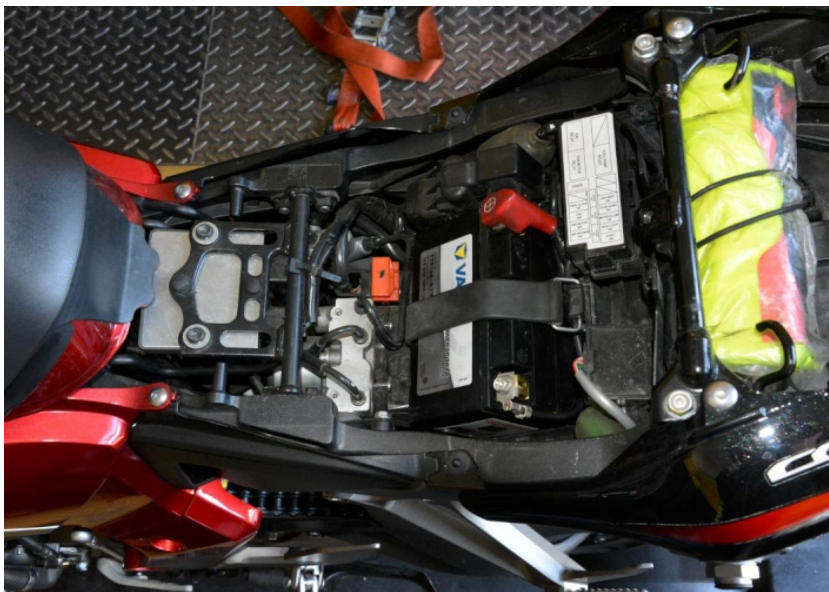

Remove the frame covers below the fuel tank.



Lift up or remove the fuel tank.



QuickShifter easy Supplementary Manual



Honda CB1000R 2008-2017 (iQSE-1 + QSH-P2T)

Take off the Black/White terminal from one coil.

Connect the QSH Green terminal to this coil terminal.

Connect the Black/White terminal to the QSH Red wire terminal.



Splice the QSH White wire to the Yellow/Blue wire of the coil by using the supplied red wire tap connector.

(Refer to the QSH-P2T instructions)



Take off the Black/White terminal from the 2nd coil.

Connect the QSH Green terminal to this coil terminal.

Isolate the unused Black/White terminal with tape.



QuickShifter easy Supplementary Manual



Honda CB1000R 2008-2017 (iQSE-1 + QSH-P2T)

Connect the QSH Black wire terminal to the chassis ground.



Mount the QSE sensor.

(Replace the bolt with the one supplied. Place the supplied washers at both sides of the sensor. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



Typical position for the QuickShifter easy.

Secure the unit properly.

