

# QuickShifter easy Supplementary Manual



## Yamaha XJR1300 2004-2017 (iQSE-1 + QSH-P2T)

Secure the bike on a stand.




Remove the seat and the side covers.

Remove the fuel tank.



Locate the ignition coil terminals under the fuel tank.

Splice the QSH White wire to the Grey/Red wire of the coil by using the supplied red wire tap connector.

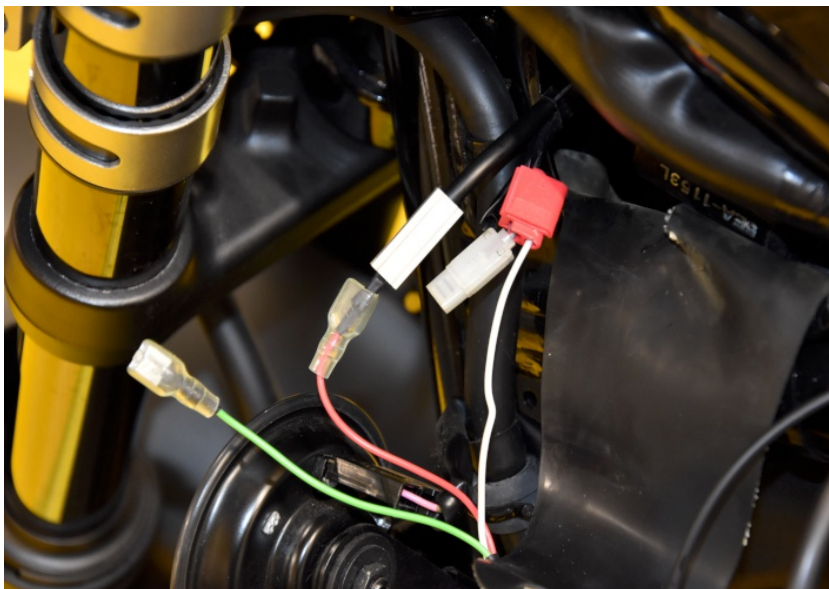

# QuickShifter easy Supplementary Manual




## Yamaha XJR1300 2004-2017 (iQSE-1 + QSH-P2T)

Take off the Red/Black terminal from the coil.

Connect the Red/Black terminal to the QSH Red wire terminal.

Connect the QSH Green terminal to this coil terminal.

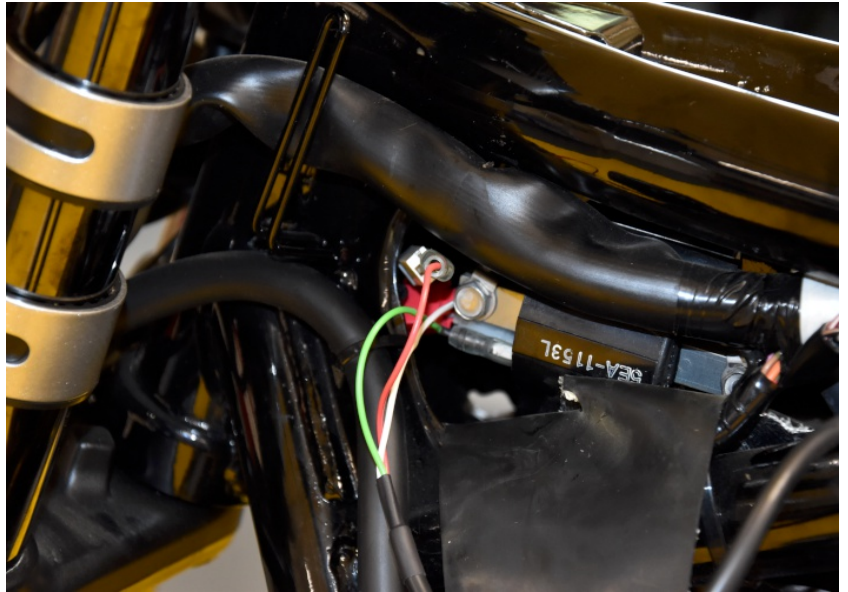

Take off the Red/Black terminal from the other ignition coil.

Connect the QSH Green terminal to the empty ignition coil terminal.

Isolate the unused Red/Black terminal with tape.



Connect the QSH Black wire terminal to the chassis ground terminal.





# QuickShifter easy Supplementary Manual



## Yamaha XJR1300 2004-2017 (iQSE-1 + QSH-P2T)

Mount the QSE sensor.

*(Place the sensor in the rod as shown. Place the supplied washers at both sides of the sensor. Tighten the nut by hand fully and then by a 1/4 turn using a wrench but maximum to about 6 Nm.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

