


QuickShifter easy Supplementary Manual

Honda CBR954RR Fireblade 2002-2003 (iQSE-1 + QSH-P4B)

Remove the main seat.



Remove the air intakes.

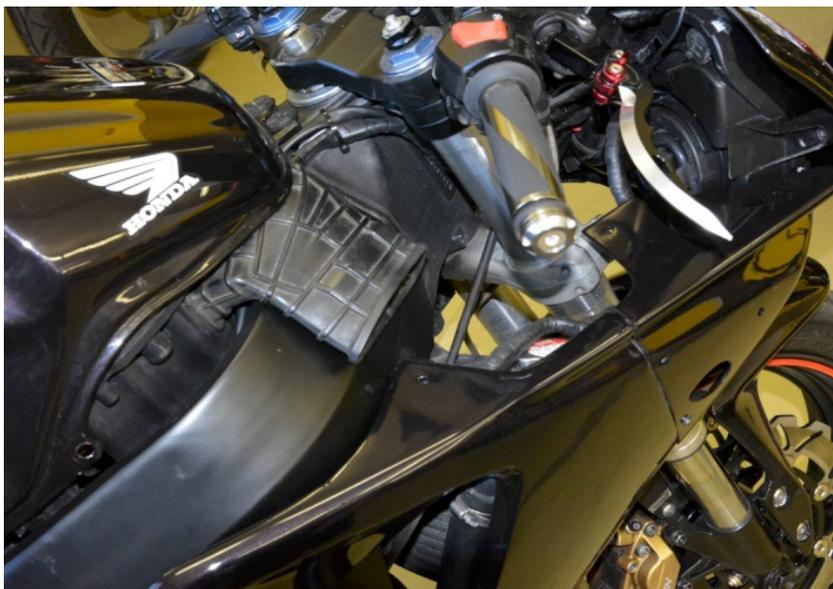

Remove the fuel tank.




QuickShifter easy Supplementary Manual




Honda CBR954RR Fireblade 2002-2003 (iQSE-1 + QSH-P4B)

Remove the airbox.

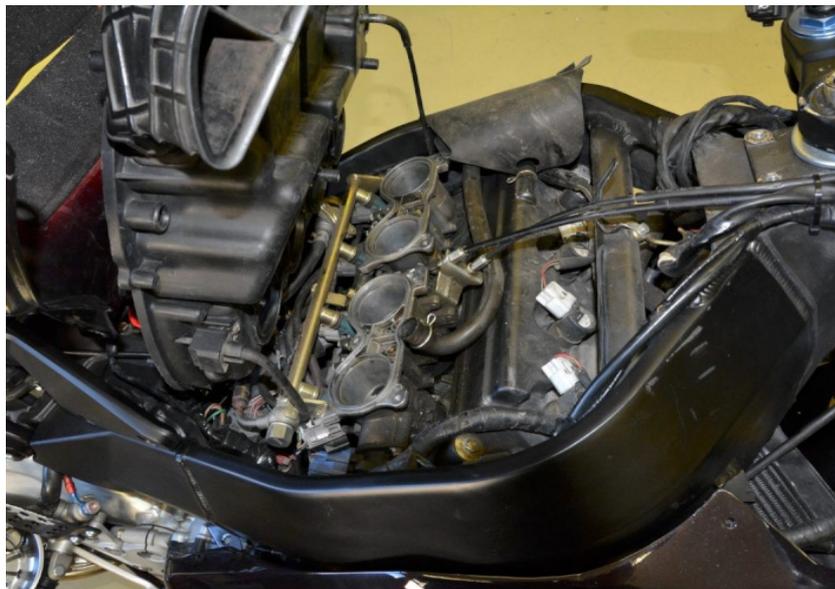


Plug the QSH connectors in-line with the ignition coil connectors.

(White, 2-pole connectors below the air intake)

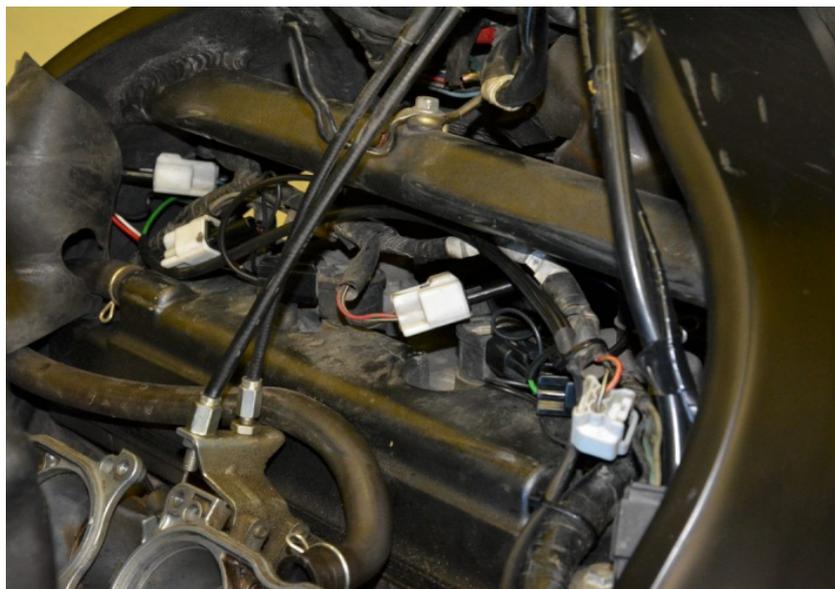

Connect the QSH Black wire terminal to the chassis ground.

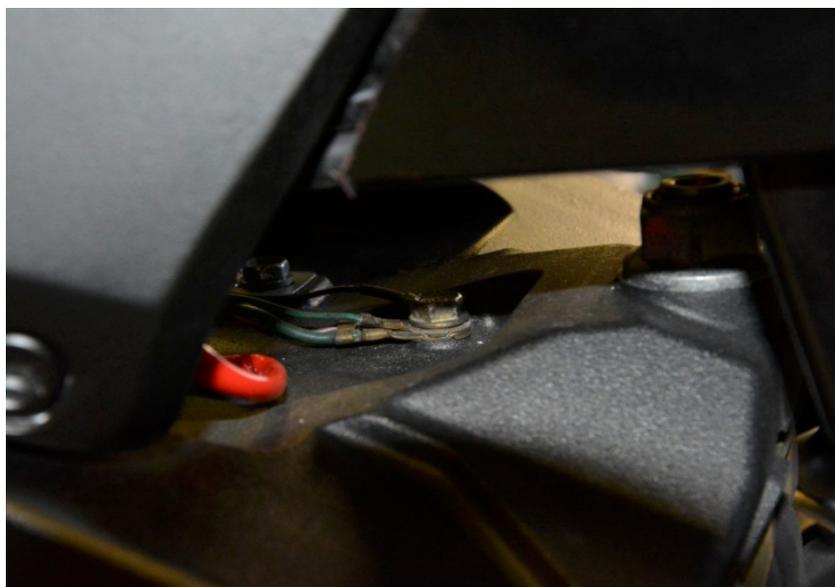

QuickShifter easy Supplementary Manual



Honda CBR954RR Fireblade 2002-2003 (iQSE-1 + QSH-P4B)

Mount the QSE sensor.

*(Replace the bolt with the one supplied.
Place the supplied washers at both sides of
the sensor. Tighten the bolt in this position
by about 6 Nm. If you do not have torque
wrench, tighten the bolt until the shift arm
is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

