## **QuickShifter easy** Supplementary Manual



## BMW F750GS ABS TC 2018- (iQSE-W1 + QSX-F2L)

Secure the bike on a stand.



Remove the seat.

Remove the cover from the fuel tank.


Remove the side fairings.

Remove the fuel tank and remove the airbox.



Locate the fuel injector connectors.

Plug the QSX connectors in-line with the fuel injector connectors.

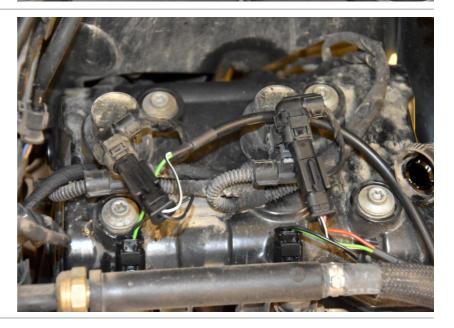

## **QuickShifter easy** Supplementary Manual



## BMW F750GS ABS TC 2018- (iQSE-W1 + QSX-F2L)

Connect the QSX Black wire terminal to the battery negative terminal.



Mount the QSE sensor.

(Place the sensor in the rod as shown. Tighten the nut by hand fully and then by a 1/4 turn using a wrench but maximum to about 6 Nm.)



Typical position for the QuickShifter easy.

Secure the unit properly.

