

SpeedoHealer CAN Supplementary Manual

Ducati Scrambler 800 ABS 2015- (SH-CAN)


Secure the bike on a stand.



Remove the seat and the plastic cover from the battery.



Locate the ABS connector.

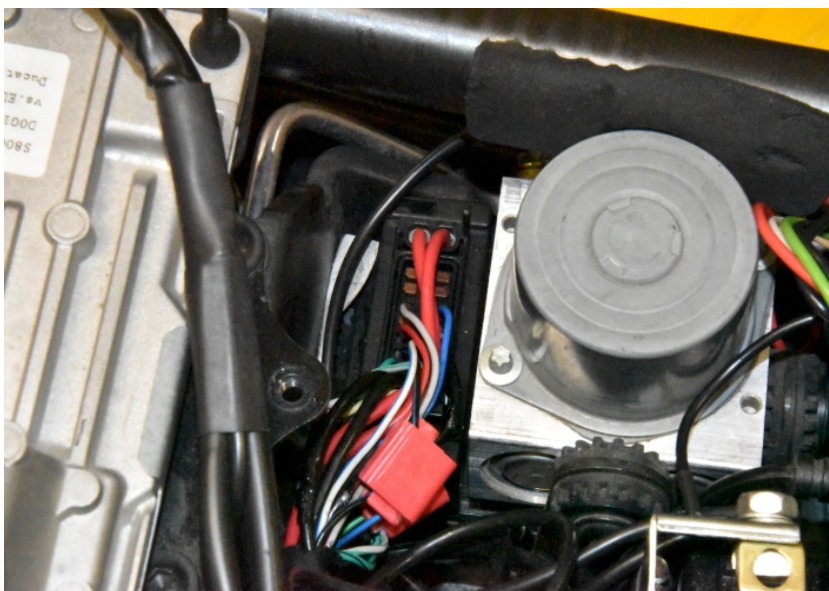

SpeedoHealer CAN Supplementary Manual




Ducati Scrambler 800 ABS 2015- (SH-CAN)

Cut the Green/Black wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the Green/Black wire end, which goes to the ABS module. Use a yellow butt connector.



Connect the SH Blue wire to the Green/Black wire end, which is at the wiring harness side. Use a yellow butt connector.

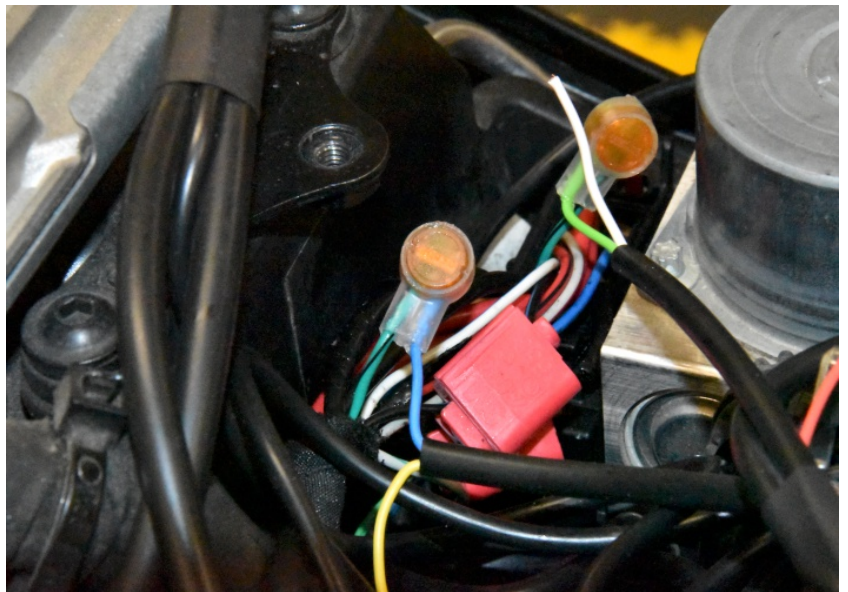

Cut the Grey/Green wire about 2,5cm (1") of the connector.

Connect the SH White wire to the Grey/Green wire end, which goes to the ABS module. Use a yellow butt connector.




SpeedoHealer CAN Supplementary Manual




Ducati Scrambler 800 ABS 2015- (SH-CAN)


Connect the SH Yellow wire to the Grey/Green wire end, which is at the wiring harness side. Use a yellow butt connector.

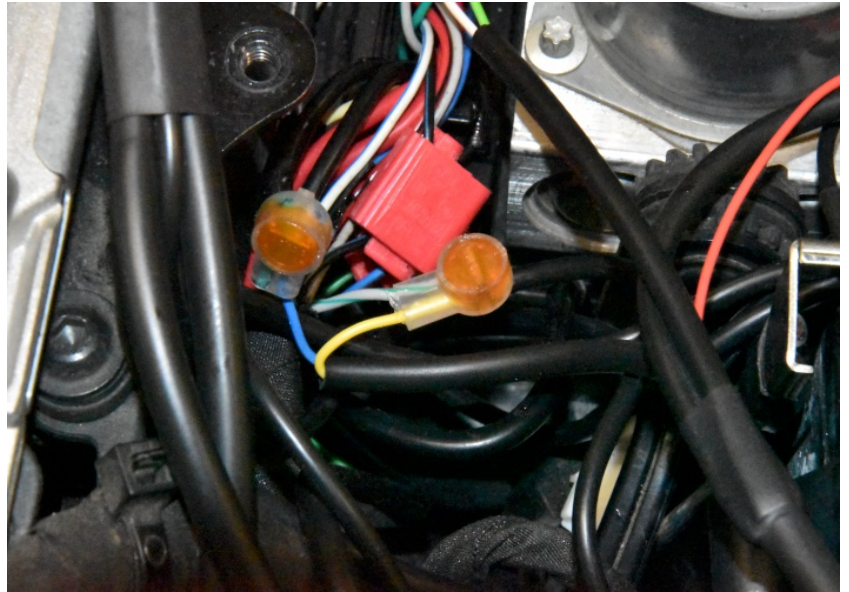

Splice the SH Red wire to the Red/Black wire of the ABS connector. Use a red wire tap connector.

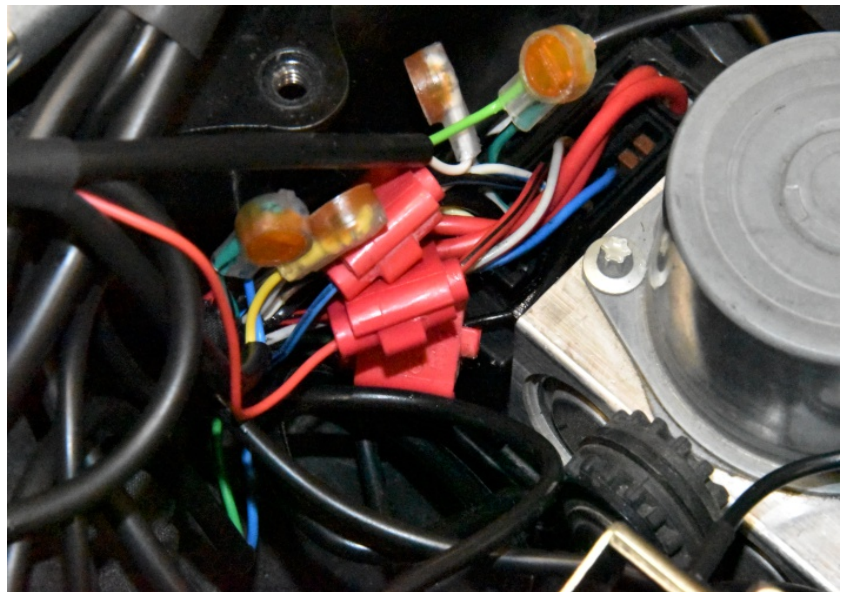

Splice the SH Black wire to the Black/Green wire of the diagnostic connector. Use a red wire tap connector.

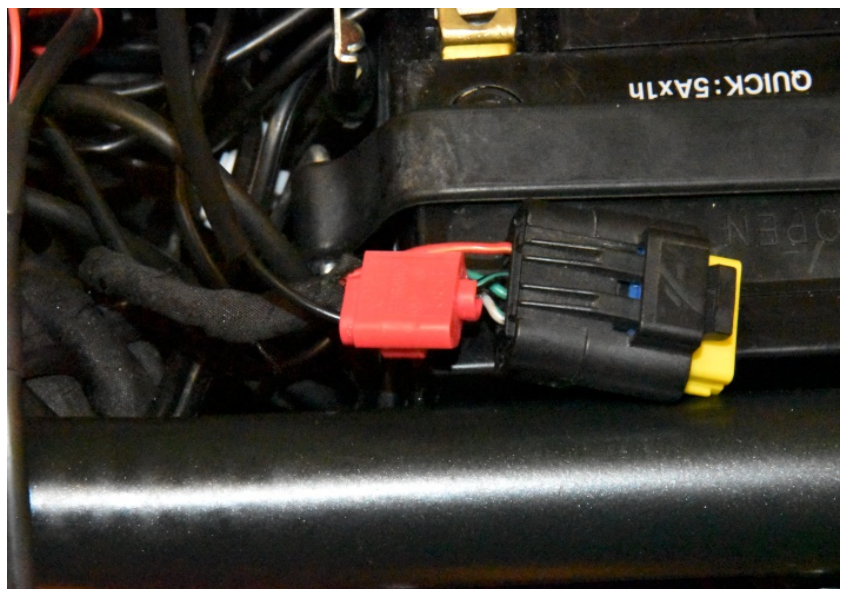

SpeedoHealer CAN Supplementary Manual



Ducati Scrambler 800 ABS 2015- (SH-CAN)

Typical position for the SpeedoHealer CAN.

Secure the unit properly.

