

SpeedoHealer CAN Supplementary Manual




Moto Guzzi V7 III ABS TC 2021- (SH-CAN)

Secure the bike on a stand.




Remove the plastic covers from the dashboard.

Locate the dashboard connector.

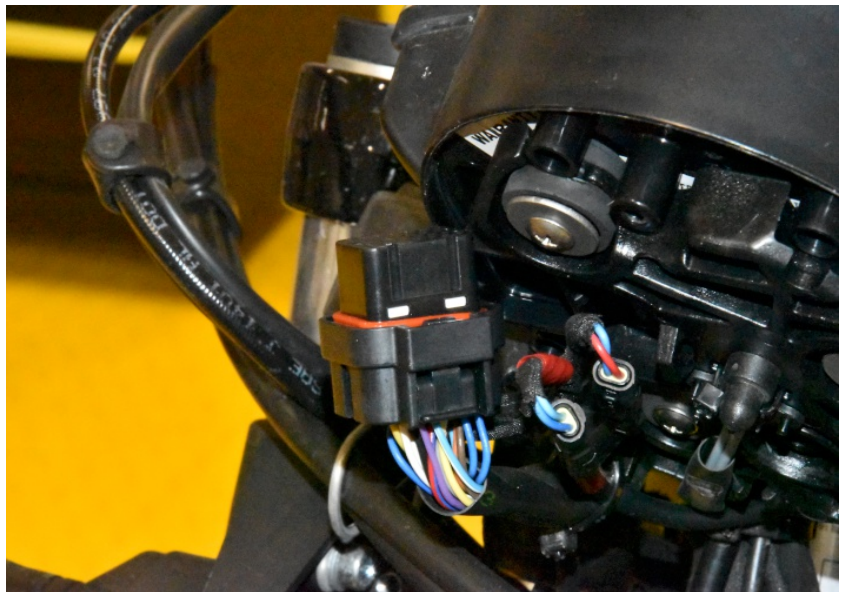

Cut the Yellow wire about 2,5cm (1") of the connector.

Connect the SH Green wire to the Yellow wire end, which goes to the dashboard. Use a yellow butt connector.

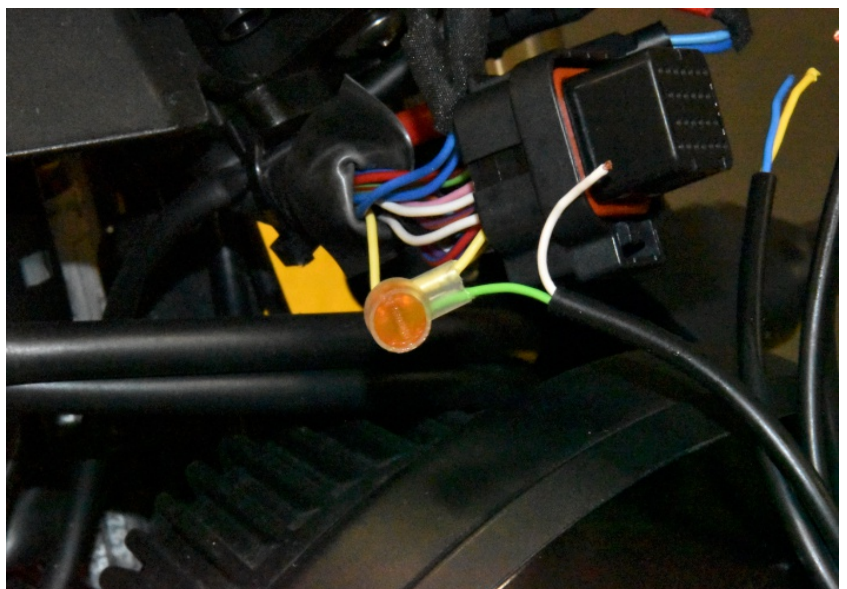

SpeedoHealer CAN Supplementary Manual




Moto Guzzi V7 III ABS TC 2021- (SH-CAN)

Connect the SH Blue wire to the Yellow wire end, which is at the wiring harness side. Use a yellow butt connector.




Cut the White wire about 2,5cm (1") of the connector.

Connect the SH White wire to the White wire end, which goes to the dashboard. Use a yellow butt connector.

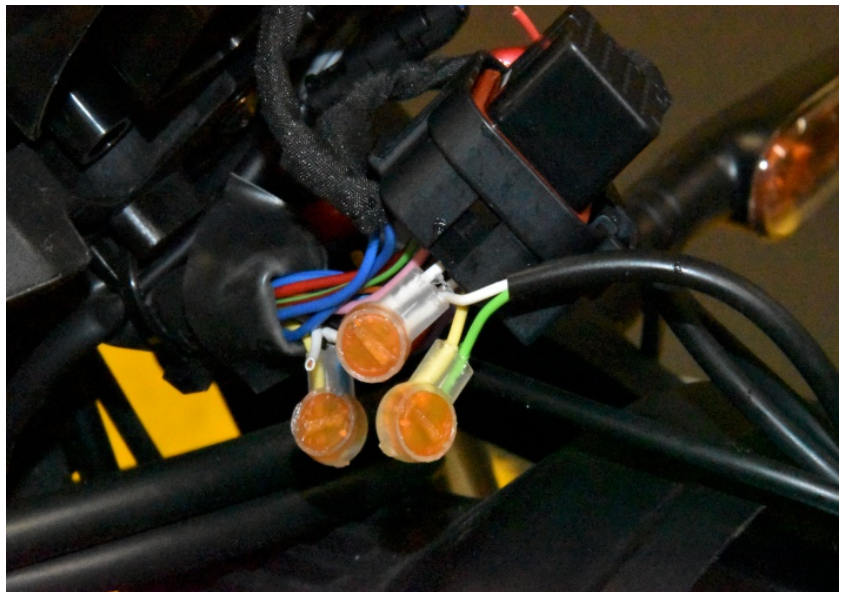

Connect the SH Yellow wire to the White wire end, which is at the wiring harness side. Use a yellow butt connector.

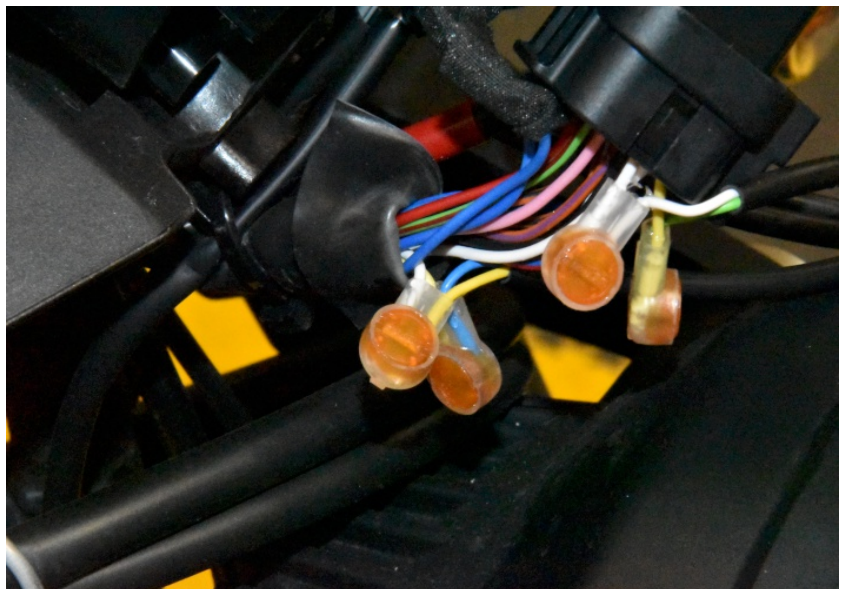


SpeedoHealer CAN Supplementary Manual



Moto Guzzi V7 III ABS TC 2021- (SH-CAN)

Splice the SH Red wire to the Green/Red wire of the dashboard connector. Use a red wire tap connector.

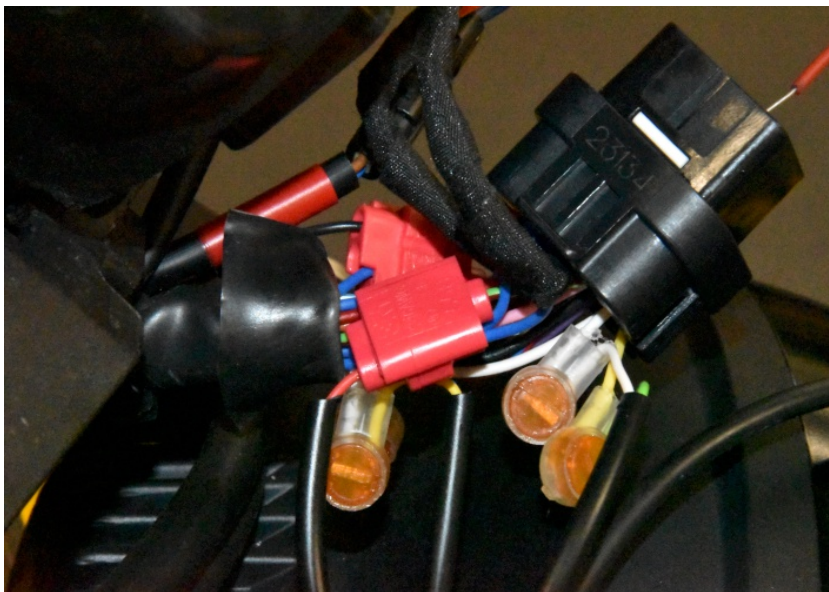

Splice the SH Black wire to the Blue wire of the dashboard connector. Use a red wire tap connector.



Typical position for the SpeedoHealer CAN.

Secure the unit properly.

