

X-TRE Power Box Supplementary Manual



Suzuki B-King 2008-2012 (XT-S01)

Secure the bike on a stand.



Remove the seats.

Remove the covers from the fuel tank.

Remove the fuel tank.



Plug X-TRE connectors in-line with the gear position sensor connectors.

(White, 3-pole triangular connectors below the fuel tank at left side)



X-TRE Power Box Supplementary Manual




Suzuki B-King 2008-2012 (XT-S01)

Locate and cut the Black/Green wire of the ECM connector.

Connect the X-TRE Black/Green wire to Black/Green wire end, which goes to the ECU/ECM connector.

Connect the X-TRE Black/White wire to Black/Green wire end, which is at the wiring harness side.

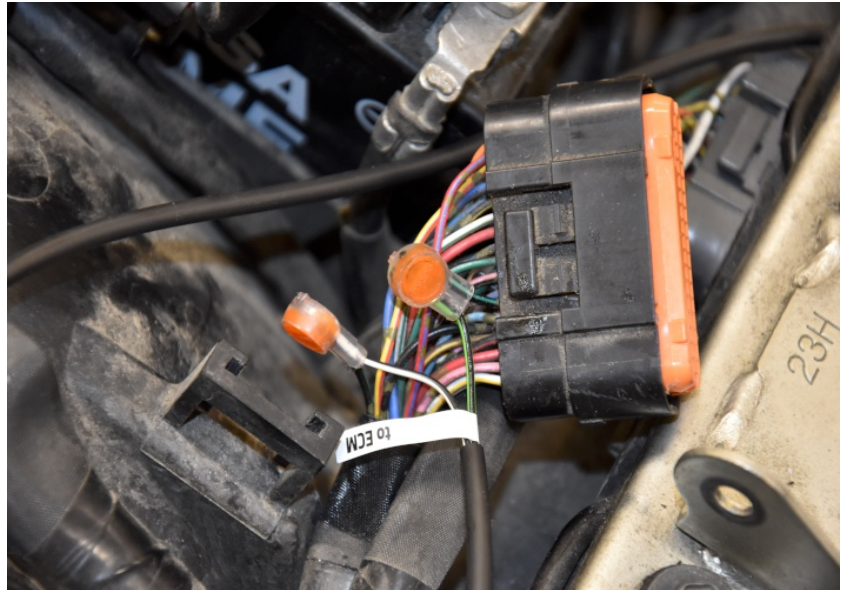

Connect the X-TRE Red wire to the Orange wire of the rear brake light switch connector.

(Transparent, 2-pole connector below the fuel tank ant the right side)



Typical position for the X-TRE Power Box.

Secure the unit properly.

